



RedMax 1/4 turn actuators - size S

Electrical, explosion proof rotary actuators

On-off / 3-pos. control mode, 24...240 VAC/DC, 95° angle of rotation incl. 5° pretension 5/10 Nm, 15/30 Nm without and 5/10 Nm, 15 Nm with safety operation (spring return) ATEX tested in acc. with directive 2014/34/EU for zone 2, 22

RedMax - ... - F
RedMax - ... - S
RedMax - ... - SF
RedMax - ... - SF

RedMax - ... - VAS

Subject to change!

Compact. Easy installation. Universal. Cost effective. Safe.

Туре	Torque	Supply	Motor running time	Spring return	Control mode	Feedback	Wiring diagram	
RedMax- 5.10	5 / 10 Nm	24240 VAC/DC	3 / 15 / 30 / 60 / 120 s/90°	-	On-off, 3-pos.	-	SB 1.0	
RedMax-15.30	15 / 30 Nm	24240 VAC/DC	3/15/30/60/120s/90°	-	On-off, 3-pos.	-	SB 1.0	
RedMax- 5.10 - F	5 / 10 Nm	24240 VAC/DC	3/15/30/60/120s/90°	3 or 10 s/90°	On-off, 3-pos.	_	SB 2.0/2.1	
RedMax- 15 - F	15 Nm	24240 VAC/DC	3/15/30/60/120s/90°	3 or 10 s/90°	On-off, 3-pos.	-	SB 2.0/2.1	
RedMax S/SF Types as above with 2 integrated, potential free auxilliary switches, 5° and 85° angle of rotation 2 × aux. switches SB 3.0						SB 3.0		
RedMax CTS Types as above with aluminium housing and seawater resistant coating (cable glands brass nickel-plated)								
RedMax VAS Types as above with stainless steel housing for aggressive ambient (cable glands brass nickel-plated)								

Product views and applications

Safety damper



Ball valve



Throttle valve







Description

The RedMax actuators are a revolution for safety, control and shut-off dampers, VAV systems, ball valves, throttle valves and other motorized applications for HVAC systems in chemical, pharmaceutical, industrial and offshore/onshore plants, for use in Ex-areas zone 2 (gas) and zone 22 (dust).

Highest protection class (ATEX) and IP66 protection, small dimensions, only 3,5 kg weight, universal functions and technical data, an integrated heater and an optional stainless steel housing guarantee safe operation even under difficult environmental conditions. High quality brushless motors guarantee long life.

All actuators are programmable and adjustable on site. Special tools or equipment are not required. Motor running times and torques as well as spring return times, according to the actuator type, are selectable or adjustable on site. The integrated universal power supply is self adaptable to input voltages in the range of 24...240 VAC/DC. The actuators are 100 % overload protected and self locking.

...Max-...F actuators are equipped with spring return fail safe function. Standard shaft connection is a double square direct coupling with 12 × 12 mm.

Different accessories are available to adapt auxiliary switches, terminal boxes or adaptions for ball valves and throttle valves and other armatures.

Highlights

- ► For all types of gases, mists, vapours and dusts in zones 2 and 22
- ► Universal supply unit from 24...240 VAC/DC
- ► 5 different motor running times 3–15–30–60–120 s/90°, adjustable on site
- ▶ 2 different spring return running times ~ 3–10 s/90°, selectable on site
- ► On-off and 3-pos. control with or without spring return function
- ► 5-10-15-30 Nm actuators in the same housing size
- ► 100 % overload protected and self locking
- ► Compact design and small dimension (L × W × H = 210 × 95 × 80 mm)
- ▶ Direct coupling to the damper shaft with double square connection 12 × 12 mm
- ▶ 95° angle of rotation inclusive 5° pretension
- ► Robust aluminium housing (optional with seawater resistant coating) or in stainless steel
- ► IP66 protection
- ► Simple manual override included + preparation for comfortable manual override
- ► Gear made of stainless steel and sinter metal
- ➤ Weight only ~ 3,5 kg
- ▶ Integrated heater for ambient temperatures down to -40 °C
- ► Integrated safety temperature sensor
- ► Integrated equipment for manual adjustment (push button, lamp, switch)
- ► Preparation for adaptable and adjustable auxiliary switches type ... Switch
- ► Wide range of accessories

RedMax-S-3P_6



RedMax-...

RedMax-...-F

RedMax-...-S

RedMax-...-SF



Special options

... -CTS

... -VAS

Technical data	RedMax- 5.10	RedMax- 15.30	RedMax- 5.10 -F	RedMax- 15 -F	
Torque motor (min.)	5 / 10 Nm selectable on site	15 / 30 Nm selectable on site	5 / 10 Nm selectable on site	15 Nm	
Torque spring (F)	-	-	min. 10 Nm	min. 15 Nm	
Torque blockade	In blockade and end positions torques are higher than above specified torques for motor and spring.				
Dimensioning of external load	Upon spring return the external load should be max. 80 % of torque spring (F).				
Supply voltage / frequency	24240 VAC/DC ± 10 %, self adaptable, frequency 5060 Hz ± 20 %				
Power consumption	max. starting currents see ① Extra information (in acc. with voltage, I start >> I rated), approx. 5 W holding power, approx. 16 W for heater				
Protection class	Class I (grounded)				
Angle of rotation and indication	95° incl. ~ 5° pretension, mechanical value indication				
Working direction	Selectable by left/right mounting to the damper/valve shaft				
Motor running times	3 / 15 / 30 / 60 / 120 s/90° selecta	able on site			
3 sec. mode – motor	In acc. with the supply voltage and	d external torque 3 to 4 s/90° angle of	rotation		
Motor	Brushless DC motor				
Control mode	On-off and 3-pos. in acc. with wirir	ng, selectable on site			
Spring return (F)	-	-	spring return upon voltage interruption		
Spring return response time	-	-	up to 1 sec. after voltage interruption		
Spring return running time (F)	-	-	~ 3 or 10 s/90° selectable on site		
3 sec. mode – spring return	-	-	~ 3 to 4 s/90° angle of rotation acc. to e	external load	
Safety operations at 10 sec. (F)	-	-	min. 10,000 acc. to construction of damp	per and ambient	
at 3 sec. (F)	-	-	min. 1,000 acc. to construction of damp	per and ambient	
Auxiliary switchesS,SF	2 integrated auxiliary switches, sw	itching at 5° and 85° angle of rotation	, potential free. Grid fuse-protection is reco	mmended!	
	$U_{max}/I_{max} AC = 250 V/5 A; U_{min}$	AC/DC = 5 V; After one-time ope	eration with U > 24 V AC/DC or I > 100 mA	: U_{min} AC/DC = 12 V	
	$U_{\text{max}}/I_{\text{max}}DC = 48 \text{ V}/1 \text{ A}; I_{\text{min}}$	AC/DC = 5 mA;		I_{min} AC/DC = 100 mA	
Axle of the actuator	Double square 12 × 12 mm, direct	coupling, 100 % overload protected a	and self locking up to 15 Nm		
Electrical connection	Cable ~ 1 m, wire cross section 0.	5 mm², equipotential bonding 4 mm².			
	Connections in hazardous areas re	equire a terminal box!			
Diameter of cable	~ Ø 7.1 mm	~ Ø 7.1 mm	~ Ø 7.4 mm	~ Ø 7.4 mm	
	2 cables in the versionsS and .	SF (~ Ø + 7.4 mm)			
Cable gland	M16 × 1.5 mm				
Manual override	Use delivered socket wrench, max	c. 4 Nm			
Heater	Integrated, controlled heater for ar	mbient temperature down to −40 °C			
Housing material			pating (CTS) or stainless steel housing,		
	№ 1.4581 / UNS-J92900 / similar				
Dimensions (L × W × H)	210 × 95 × 80 mm, for diagrams s				
Weight	~ 3,5 kg aluminium housing, stainl	•			
Ambients	Storage temperature -40+70 °C	C, working temperature −40+40 °C a	at T6 and −40+50 °C at T5		
Humidity	090 % rH, non condensing				
Operating 3 sec. motor run time	In 3 s mode the motor will work only after 1 minute of voltage supply. While open/close operation (open voltage supply and shut it down)				
	motor works only with speed of 15				
≥ 15 sec. motor run time	at 15 / 30 / 60 / 120 s 100 % of ED	is permitted (ED = duty cycle)			
Wiring diagrams	SB 1.0	SB 1.0	SB 2.0 / 2.1	SB 2.0 / 2.1	
Scope of delivery		4 nuts M4, Allen key for simple manua			
Parameter at delivery	5 Nm, 30 s/90°	15 Nm, 30 s/90°	5 Nm, 30 s/90°	15 Nm, 30 s/90°	

Approbations			
ATEX Directive	2014/34/EU	CE Marking	CE 0158
ATEX Conformity	EPS 18 ATEX 1 216 X	EMC Directive	2014/30/EU
IECEx Conformity	IECEx EPS 18.0107X	Low Voltage Directive	2014/35/EU
Marking Gases	II 3 (3) G Ex db [ic Gc] IIC T6, T5 Gc	Enclosure Protection	IP66 in acc. with EN 60529
TypesCTS	II 3 (3) G Ex db [ic Gc] IIB T6, T5 Gc		
Marking Dusts	II 3 (3) D Ex tc [ic Dc] IIIC T80°C, T95°C Dc		

RedMax-S-3P_en V04 – 14-Jan-2019

Schischek GmbH Germany, Muehlsteig 45, Gewerbegebiet Sued 5, 90579 Langenzenn, Tel. +49 9101 9081-0, Fax +49 9101 9081-77, E-Mail info-de@schischek.com

... -VAS

Special options

... -CTS




Electrical connection

All actuators are equipped with a universal supply unit working at a voltage range from 24...240 VAC/DC. The supply unit is self adjusting to the connected voltage! The safety operation of the spring return function works if the supply voltage is cut. For electrical connection inside hazardous areas a terminal box is required (e.g. RedBox). An over-current protection fuse < 10 A has to be provided by installer.

Note: the initial current is appr. 2 A for 1 second.


Integrated auxiliary switches signal the rotation angle's position. Umin and I min change once the switches were operated with higher voltage or current.


Wiring diagram RedMax- ... (without spring return)

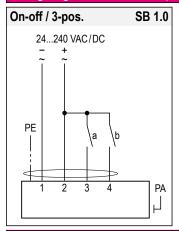




RedMax- ... -F (with spring return) Wiring diagram

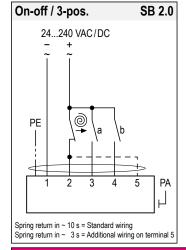


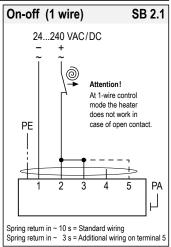

Wiring diagram RedMax- ... -S and ... -SF

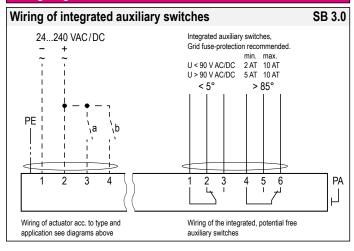

Parameters, adjustments and failure indication

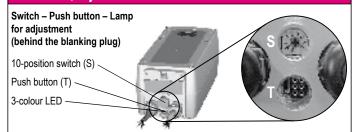

Pa

arameter selection					
Example:	Туре		Torc	ques	
RedMax-15.30	RedMax- 5.10	\blacktriangleright	5 Nm	10 Nm	
	RedMax-15.30	\blacktriangleright	15 Nm	30 Nm	
Requested parameter:	RedMax- 5.10-F	\triangleright	5 Nm	10 Nm	
Torque 30 Nm	RedMax- 15-F	\triangleright	15 Nm		
Motor running time 30 s/90°			▼	▼	
3	Running times		Position of	f switch (S)	
Result:	3 s/90°	\blacktriangleright	00	05	
Switch position 07	15 s/90°	\blacktriangleright	01	06	
. Ш	30 s/90°	\blacktriangleright	02	07 08	
	60 s/90°	\blacktriangleright	03	08	
	120 s/90°	\triangleright	04	09	

Functions, adjustments and parameters

A) Self adjustment of angle of rotation

Turn switch (S) to position 02 (low torque) or 07 (high torque). Press button (T) for a minimum of 3 seconds. The actuator drives to both end positions and detects the blocking positions. The LED flashes GREEN during adjustment. The adjustment takes about 60 seconds (30 sec. "On", 30 sec. "Off").

B) Selecting motor running time and torque

Adjust parameters only if actuator is in idle state or without applied potential. Turn switch (S) to the position required for the intended operation acc. to table above. The selected parameters will be carried out at the actuator's next operation.


Selecting spring return time

Spring return time is selected by wiring.

D) Additional information for control in 3-pos. operation

= direction I a and b closed a closed, b open = motor doesn't work b closed, a open = direction II a and b open = motor doesn't work The rotation direction (I and II) depends on left/right mounting of the actuator to the damper. To reverse the rotation direction (by motor) exchange the electrical wiring of terminal 3 and 4.

Installation

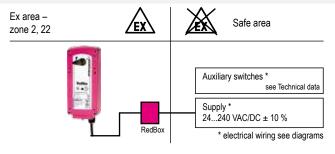

- Do not open the cover when circuits are live
- · Connect potential earth
- Close all openings to ensure enclosure protection
- · Clean only with damp cloth, avoid dust accumulation

RedMax-S-3P_en V04 - 14-Jan-2019



Special options

... -CTS ... -VAS

Important information for installation and operation

A. Installation, commissioning, maintenance

All national and international standards, rules and regulations for hazardous Ex-areas must be complied with. Certified apparatus must be installed in accordance with manufacturer instructions. If the equipment is used in a manner not specified by the manufacturer, the safety protection provided by the equipment may be impaired. For electrical installations design, selection and erection, EN/IEC 60079-14 can be used.

For electrical connection an Ex-e terminal box is required (e.g. RedBox-...).

Attention: If the actuator is put out of operation all Ex rules and regulations must be applied. You have to cut the supply voltage before opening the terminal box!

The cables of the actuator must be installed in a fixed position and protected against mechanical and thermical damage. Connect potential earth. Avoid temperature transfer from armature to actuator! Close all openings with min. IP66.

For outdoor installation a protective weather shield against sun, rain and snow should be applied to the actuator as well as a constant supply at terminal 1 and 2 for the integrated heater. During commissioning apply a self adjustment drive.

Actuators are maintenance free. An annual inspection is recommended. For electrical installations inspection and maintenance, EN/IEC 60079-17 can be used. Ex-actuators must not be opened by the customer.

B. Manual override

Manual override only if supply voltage is cut. Use delivered socket wrench with slow motions, usage can be tight.

Attention: Releasing or letting go the Allen key too fast at manual operating actuators with spring return causes risk of injury!

C. Shaft connection, selection of running time

Actuators are equipped with a direct coupling double square shaft connection of 12 × 12 mm. For round shafts adaptors/clamping connection (accessories, e.g. KB-S) are available. The housing of the actuator is axially symmetrically built to select Open-close direction of the spring return function by left-right mounting. Using the 10-position switch different motor running times and spring return running times can be selected on site in acc. to the actuator type

D. Operation with 3 sec. motor running time

Note following:

- 1. The 3 sec. motor running time mode is only available in switch position 0 and 5 and at a constant supply voltage applied for a minimum of 1 minute on terminal 1 and 2.
- 2. The actuator opens at voltage on terminal 3 (resp. closes) and closes at voltage on terminal 4 (resp. opens) - depending on mounting position of the actuator.
- 3. The max. duty ratio is 10 % resp. 1 cycle/minute. Between two fully 3 sec. cycles in the same direction there must be a minimum intermission of 1 minute. Trying to run the actuator in the same direction in less than the required minimum of 1 minute the function will be blocked for the rest of the idle period. Later the release for the next cycle is made automatically by an internal timing relay.
- 4. Same function is applied on spring return actuators, fail safe operation is regarded same as a motor running cycle.
- 5. Trying to use the 1 wire On-off methode in switch position 0 and 5, software changes the motor running time temporarily and automatically to 15 s/90° to protect the actuator for overheating due to uncontrolled duty ratio.

E. 3-position control mode

... Max actuators are in the best way suitable for the 3-pos. operation. To protect such elements as gears and mounting elements against harmful influences like minimum pulse time, ... Max actuators are protected via internal electronics. It ignores impulses < 0.5 s, the cyclic duration must be min. 0.5 s. At changing direction the pause is 1 s.

F. Spring return

Spring return function works only if the supply voltage for terminal 1 or 2 is cut. In the event of an electrical interruption, the spring returns to its end position even if supply voltage is available again during return function. Thereafter operation will continue.

G. Operation at ambient temperatures below -20 °C

All actuators are equipped with a regulated integrated heating device designed for employments down to $-40~^{\circ}\text{C}$ ambient temperature. The heater will be supplied automatically by connecting the constant voltage supply on the clamps 1 and 2.

- 1. After mounting the actuator must bei immediately electrically connected.
- 2. The heater switches on automatically when actuator reaches internally -20 °C. It heats up the actuator to a proper working temperature, then heater switches off automatically. Actuator will not run during heating process.
- 3. The adjustment options are only ensured after this heating up period.

H. Excess temperatures

In acc. to the ATEX rules and regulations Ex actuators must be protected against excess temperature. The internal thermostat works as a maximum limiter and, in the event of failure at incorrect temperatures, shuts off the actuator irreversible. An upstream connected temperature sensor stops the actuator before reaching its max. temperature. This safety feature is reversible, after cooling down the actuator is completely functional again. In this case the failure must be eliminated immediately on site!

I. Synchron mode

Do not connect several actuators to one shaft or link mechanically together.

J. Mechanical protection

Actuators must be operated with a minimum external load.

After installing the actuator to the damper/armature a self adjustment drive has to be performed in order to protect the damper/armature against mechanical overload. During operation the actuator reduces briefly its speed (motor power) before reaching the end position for a "gentle" blockade/stop.

K. Intrinsically safe circuits

The supply of the push button (adjustment drive), the 10-position switch (adjustment of torque and running time) and the LED indicator is performed intrinsically safe!

L. Loss of voltage

In switch position 00, 01 and 05, 06 (motor running times 3 sec. and 15 sec.) and after interrupted voltage the actuator (types 5.10 and 15.30 and ...-S) moves in OFF position then the actuators works regarding control signal.

(i) Extra information (see additional data sheet)

Additional technical information, dimensions, installation instruction, illustration and failure indication

Special solutions and accessories

...-CTS Types in aluminium housing with seawater resistant coating,

parts nickel-plated

...-VAS Types in stainless steel housing, parts nickel-plated Adaptions for dampers and valves on request

RedMax-...-S3 Ambient temperature up to +60 °C (T4), 110...240 VAC/DC, 25 % ED

RedMax-...-S7 Actuator shock approved up to 500 g

RedBox-... Terminal boxes for zone 2, 22 MKK-S Mounting bracket for boxes type ... Box-... directly on actuator RedSwitch 2 external aux. switches, adjustable for zone 2, 22 HV-S... Comfortable manual override for...Max actuators size S KB-S Clamp for damper shafts Ø 10...20 mm and □ 10...16 mm AR-12-xx Reduction part for 12 mm square connection to 11, 10, 9 or 8 mm shafts Kit-S8 Cable glands nickel-plated

RedMax-S-3P_en V04 – 14-Jan-2019

Schischek GmbH Germany, Muehlsteig 45, Gewerbegebiet Sued 5, 90579 Langenzenn, Tel. +49 9101 9081-0, Fax +49 9101 9081-77, E-Mail info-de@schischek.com